
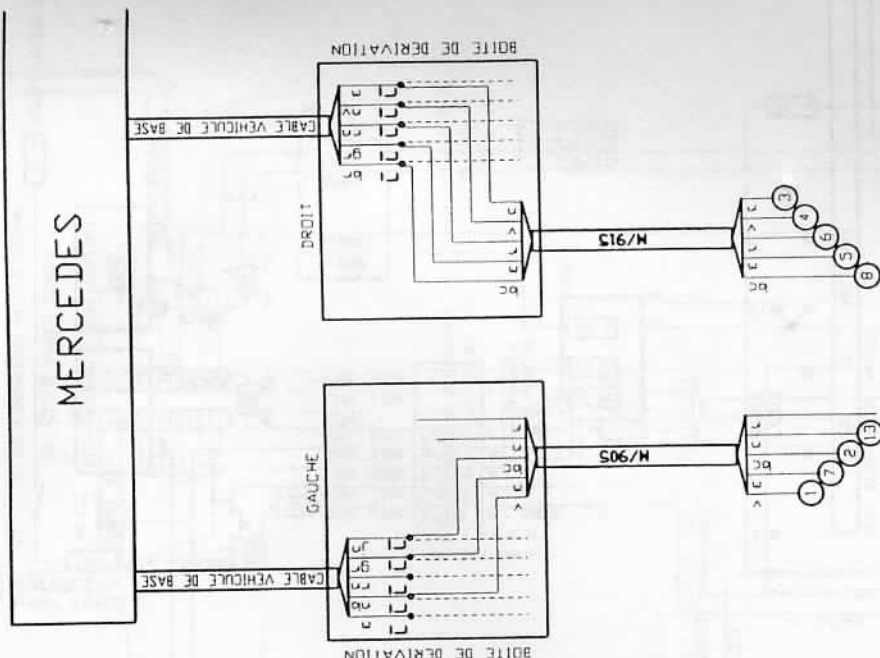


This diagram shows the exploded view of a 12V 100Ah battery. The components are numbered as follows:

- 1: Battery cover
- 2: Battery terminal cap
- 3: Battery terminal cap
- 4: Battery terminal cap
- 5: Battery terminal cap
- 6: Battery terminal cap
- 7: Battery terminal cap
- 8: Battery terminal cap
- 9: Battery terminal cap
- 10: Battery terminal cap
- 11: Battery terminal cap
- 12: Battery terminal cap
- 13: Battery terminal cap

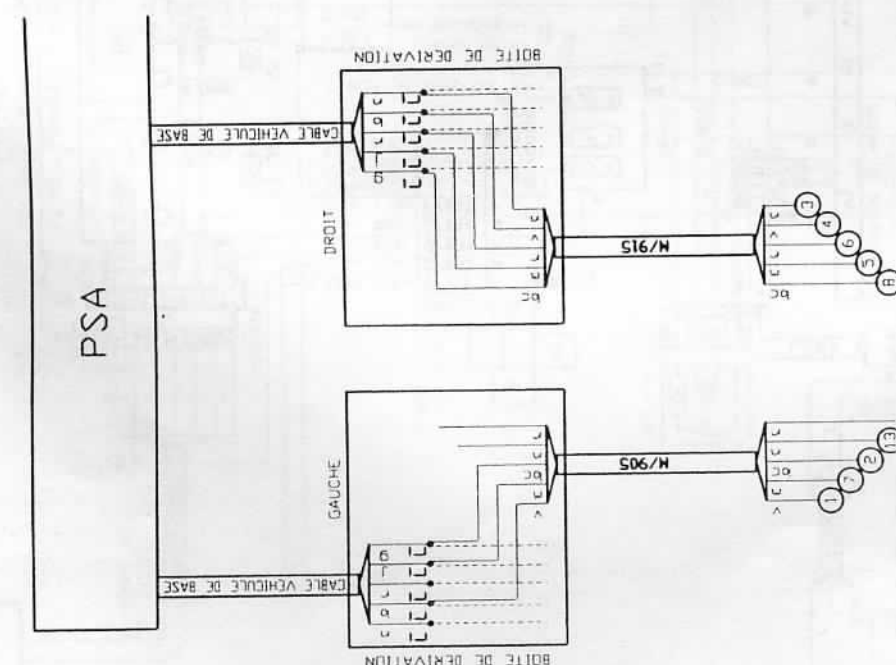

1	INDICATEUR DE DIRECTION GAUCHE	VERT
2	FEU DE BRUILLARD	BLANC
3	MASSE (POLES 1 A 8)	NOIR
4	INDICATEUR DE DIRECTION DROIT	VERT
5	FEU DE POSITION DROIT	MARRON
6	FEU STOP	ROUGE
7	FEU DE POSITION GAUCHE	MARRON
8	FEU DE RECUL (PORTE MOTD)	BLANC
9	LIBRE	
10	LIBRE	
11	LIBRE	
12	LIBRE	
13	MASSE (POLES 9 A 12)	NOIR

## OPTION ATTELAGE

[illegible]

Antenne de perçage

Antenne de pare-brise

6